
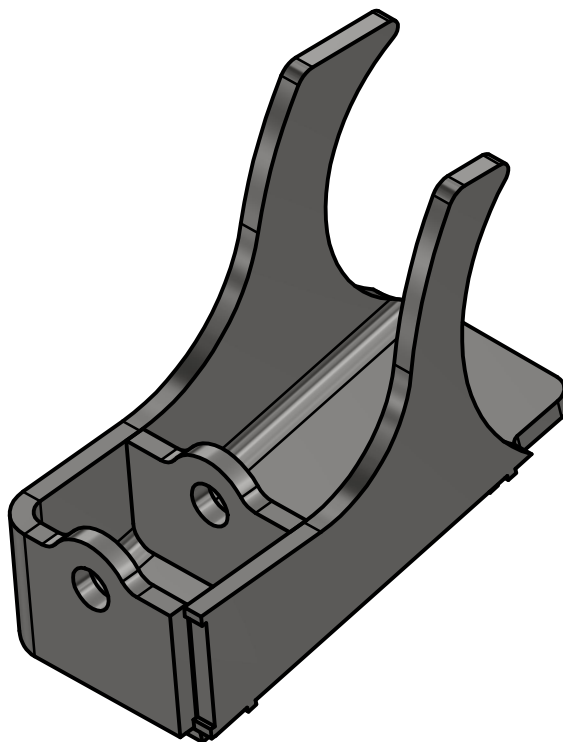
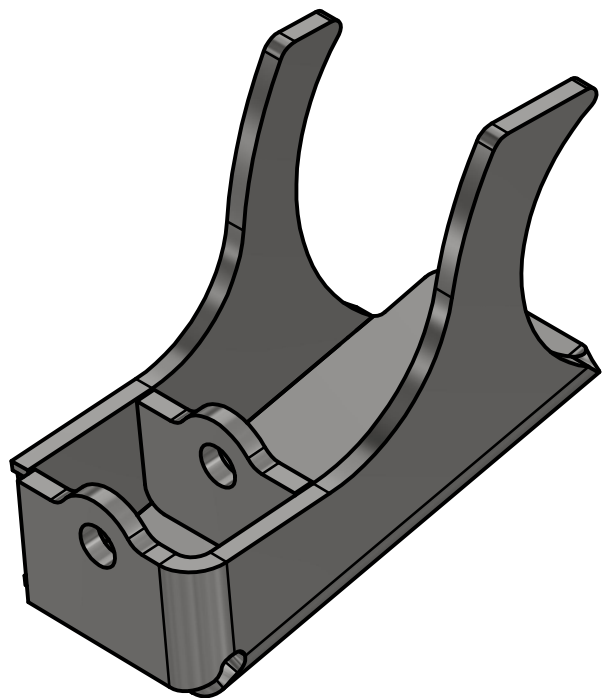
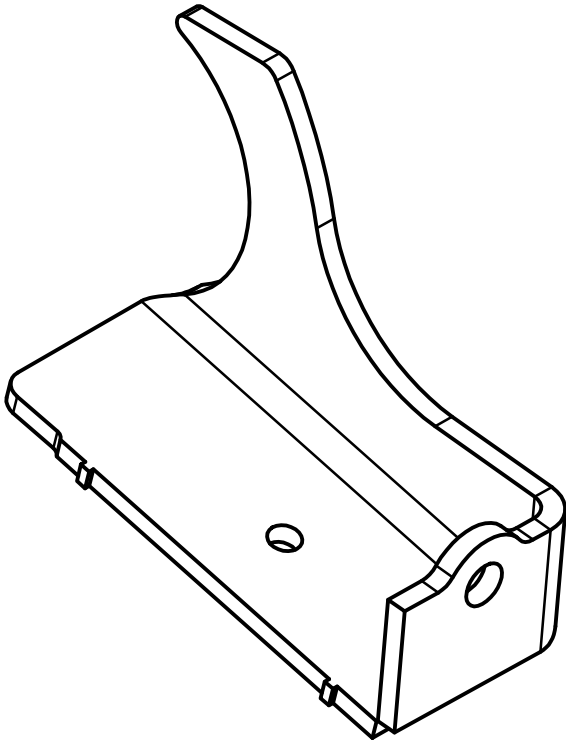
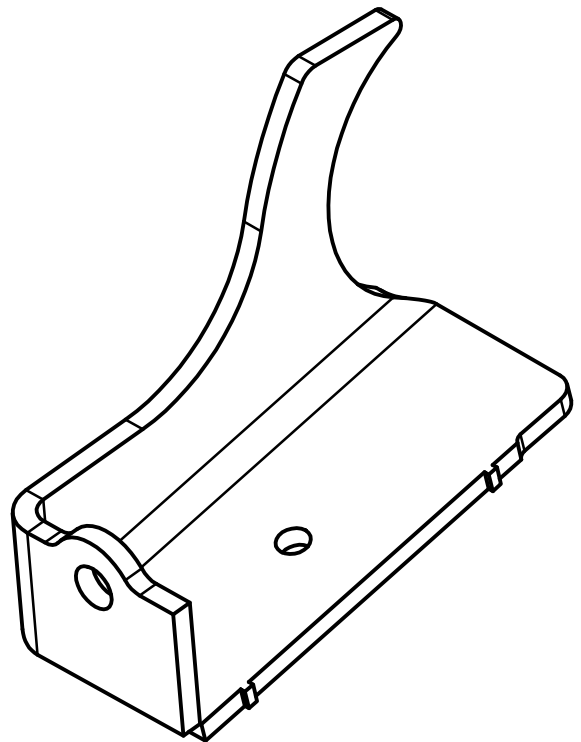
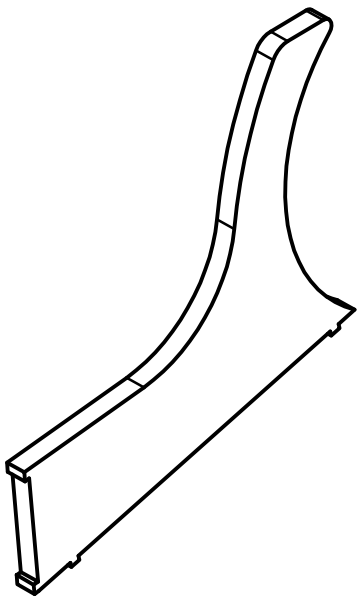
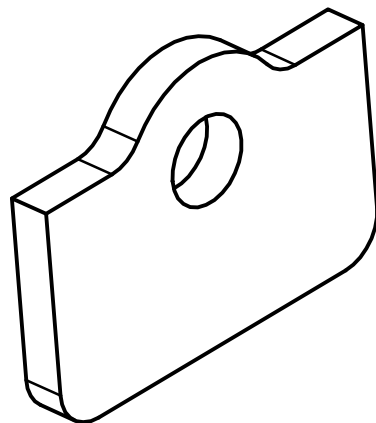
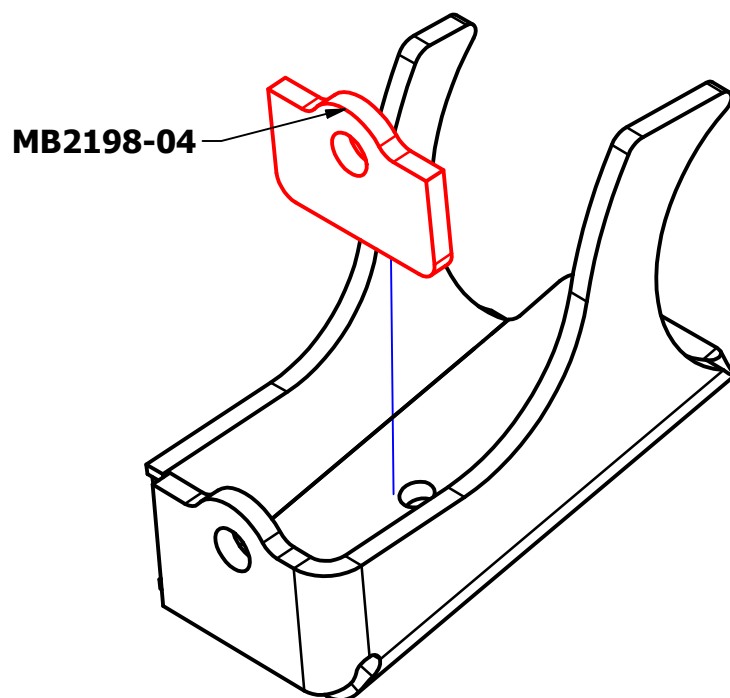




MB2198 - Assembly Instructions Coilover Drop Bracket for 3.5" Axle Tube**MB2198 COILOVER DROP BRACKET
FOR 3.5" AXLE TUBE****ASSEMBLY INSTRUCTIONS**

MB2198 - Shipping Coilover Drop Bracket for 3.5" Axle Tube**CONTENTS****MB2198-01****MB2198-02****MB2198-03**
Qty 2**MB2198-04**
Qty 2

MB2198 - Assembly Instructions Coilover Drop Bracket for 3.5" Axle Tube

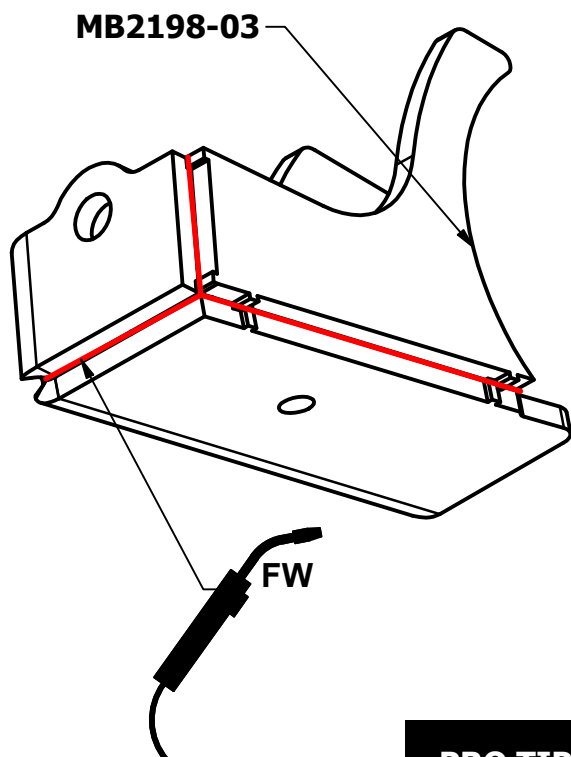

PRO TIP: USE WELD SPACER TO ENSURE SHOCK FITS IN BRACKET AFTER WELDING

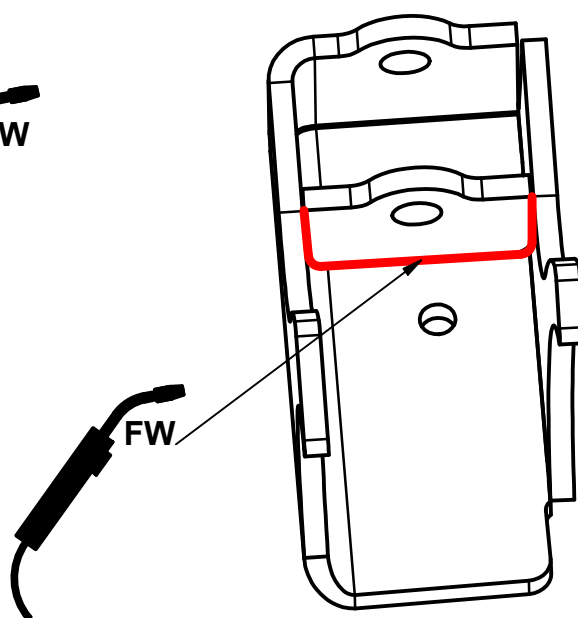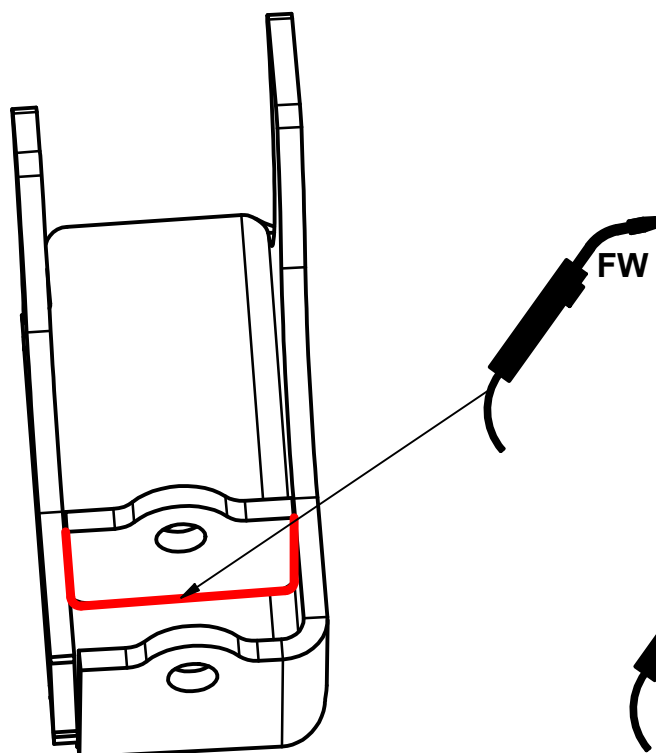

MB2198 - Assembly Instructions Coilover Drop Bracket for 3.5" Axle Tube