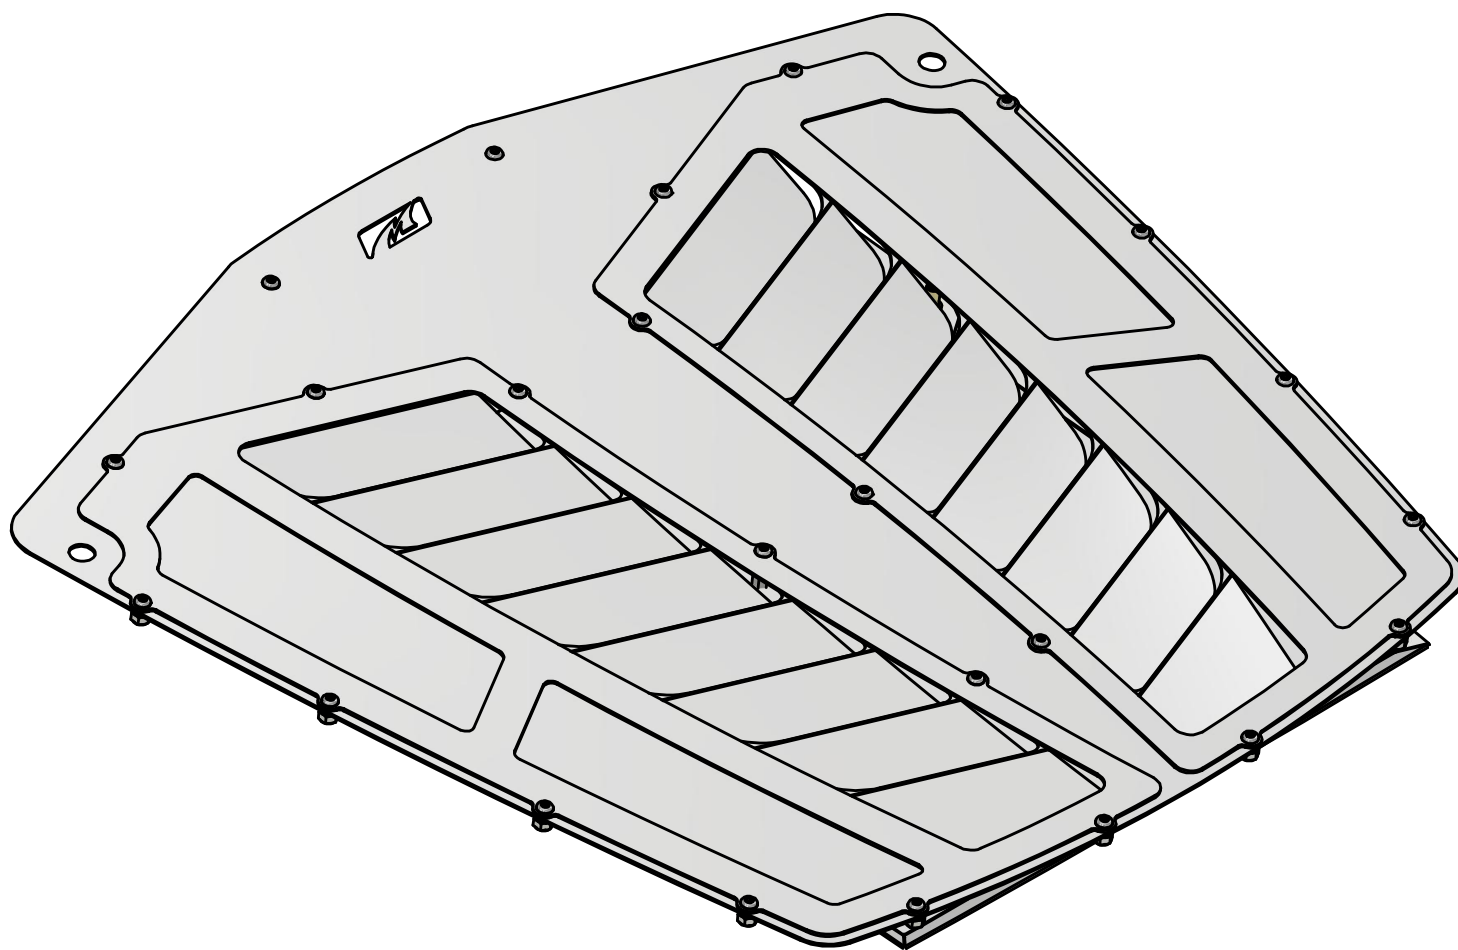



**MB5537 - Assembly Instructions****MB5537 - HOOD VENT KIT**

Compatible with 2007-2018 Jeep Wrangler JK / JKU


**ASSEMBLY INSTRUCTIONS**

# MB5537 - Assembly Instructions


## CONTENTS

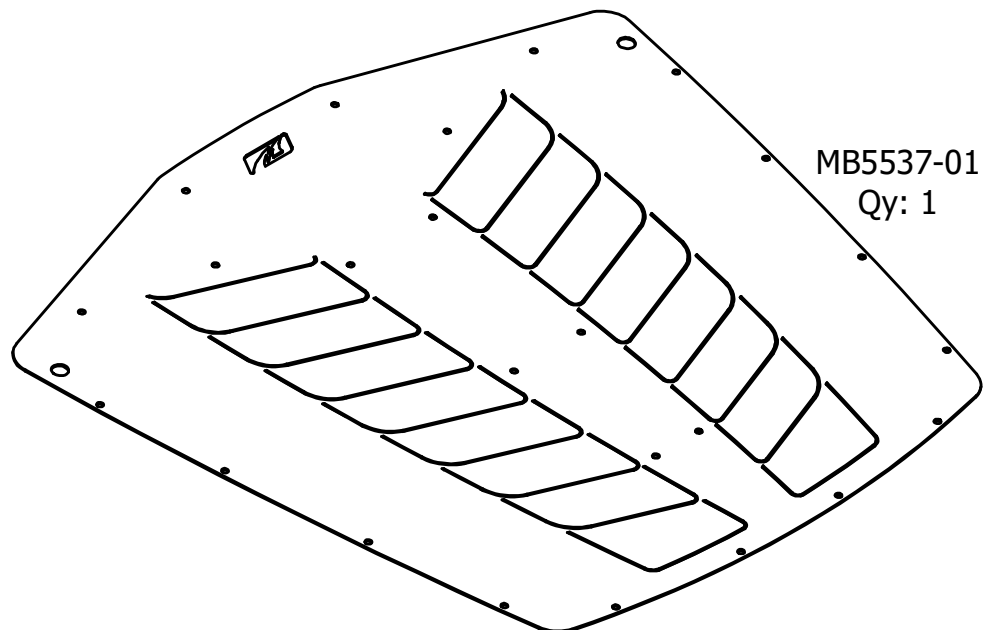


MB5537-01  
Qty: 1

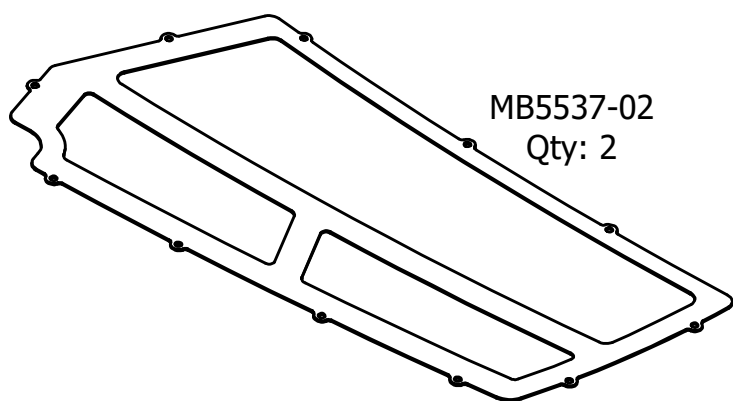

MB5537-02  
Qty: 2

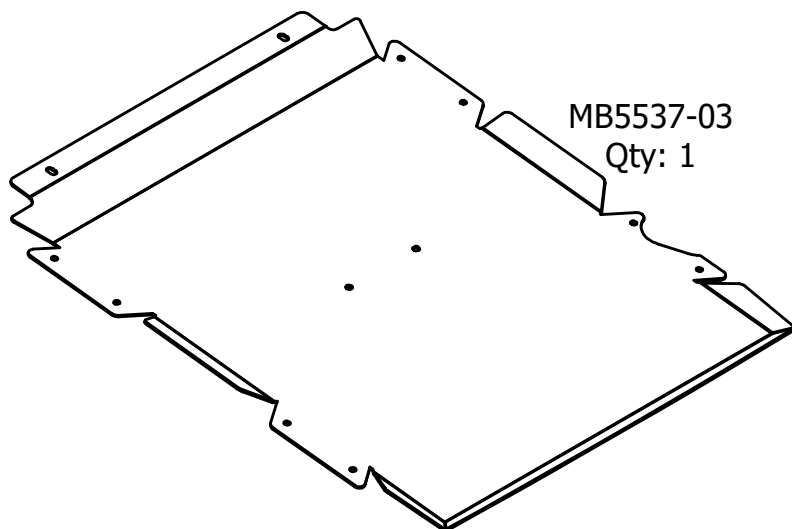


MB5537-03  
Qty: 1




#10-24 x 1/2" BHS-SS  
Qty: 34



#10 Flat Washer SZ  
Qty: 26



#10-24 Riv Nut YZ  
Qty: 6 (2 Spares)

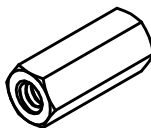

#10-24 x 3/4" Hex Coupling Nut SZ  
Qty: 2




#10-24 Nylock Nut SZ  
Qty: 22

## MB5537 - Assembly Instructions

**USE WINDSHIELD BUMPERS TO ALIGN HOOD. DRILL AND TEMPORARILY INSTALL THE TOP 2 AND BOTTOM 2 BOLTS**


**USE A MARKER TO TRACE THE PROFILE OF THE VENTS**

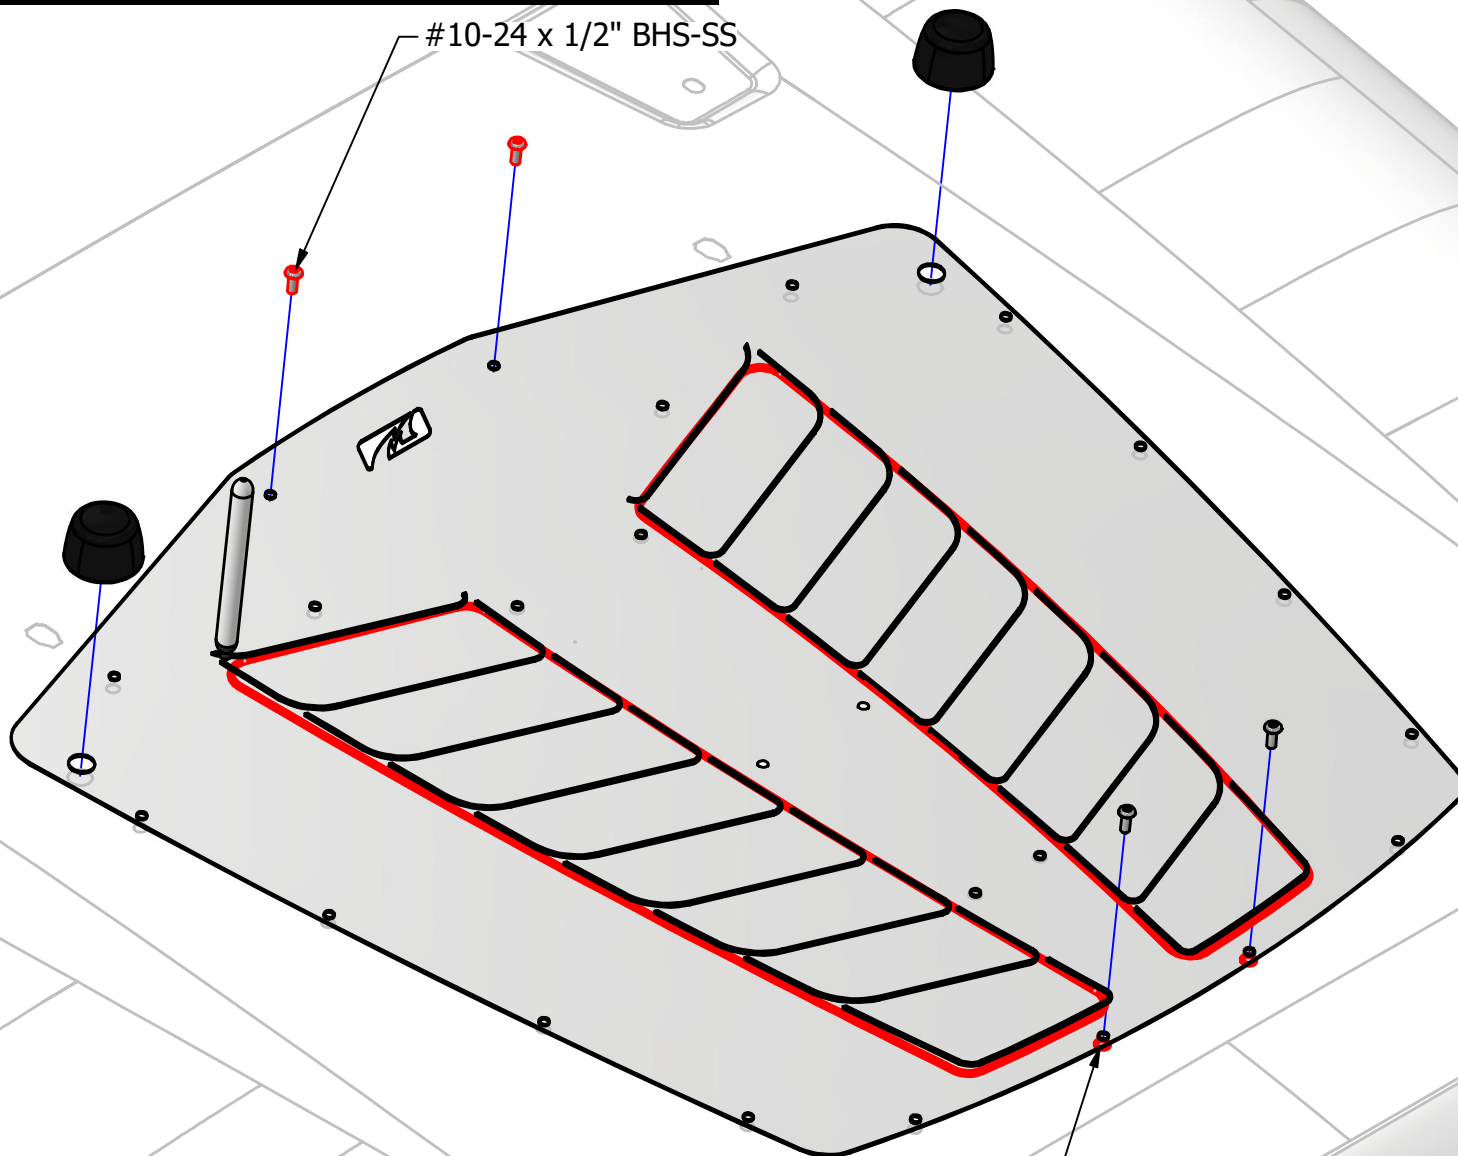

DRILL 7/32" HOLE (x4)



## MB5537 - Assembly Instructions

**USING A CUTOFF WHEEL OR SIMILAR TOOL  
REMOVE ONLY THE TOP SKIN OF THE HOOD  
LEAVING THE SUPPORTS INTACT**

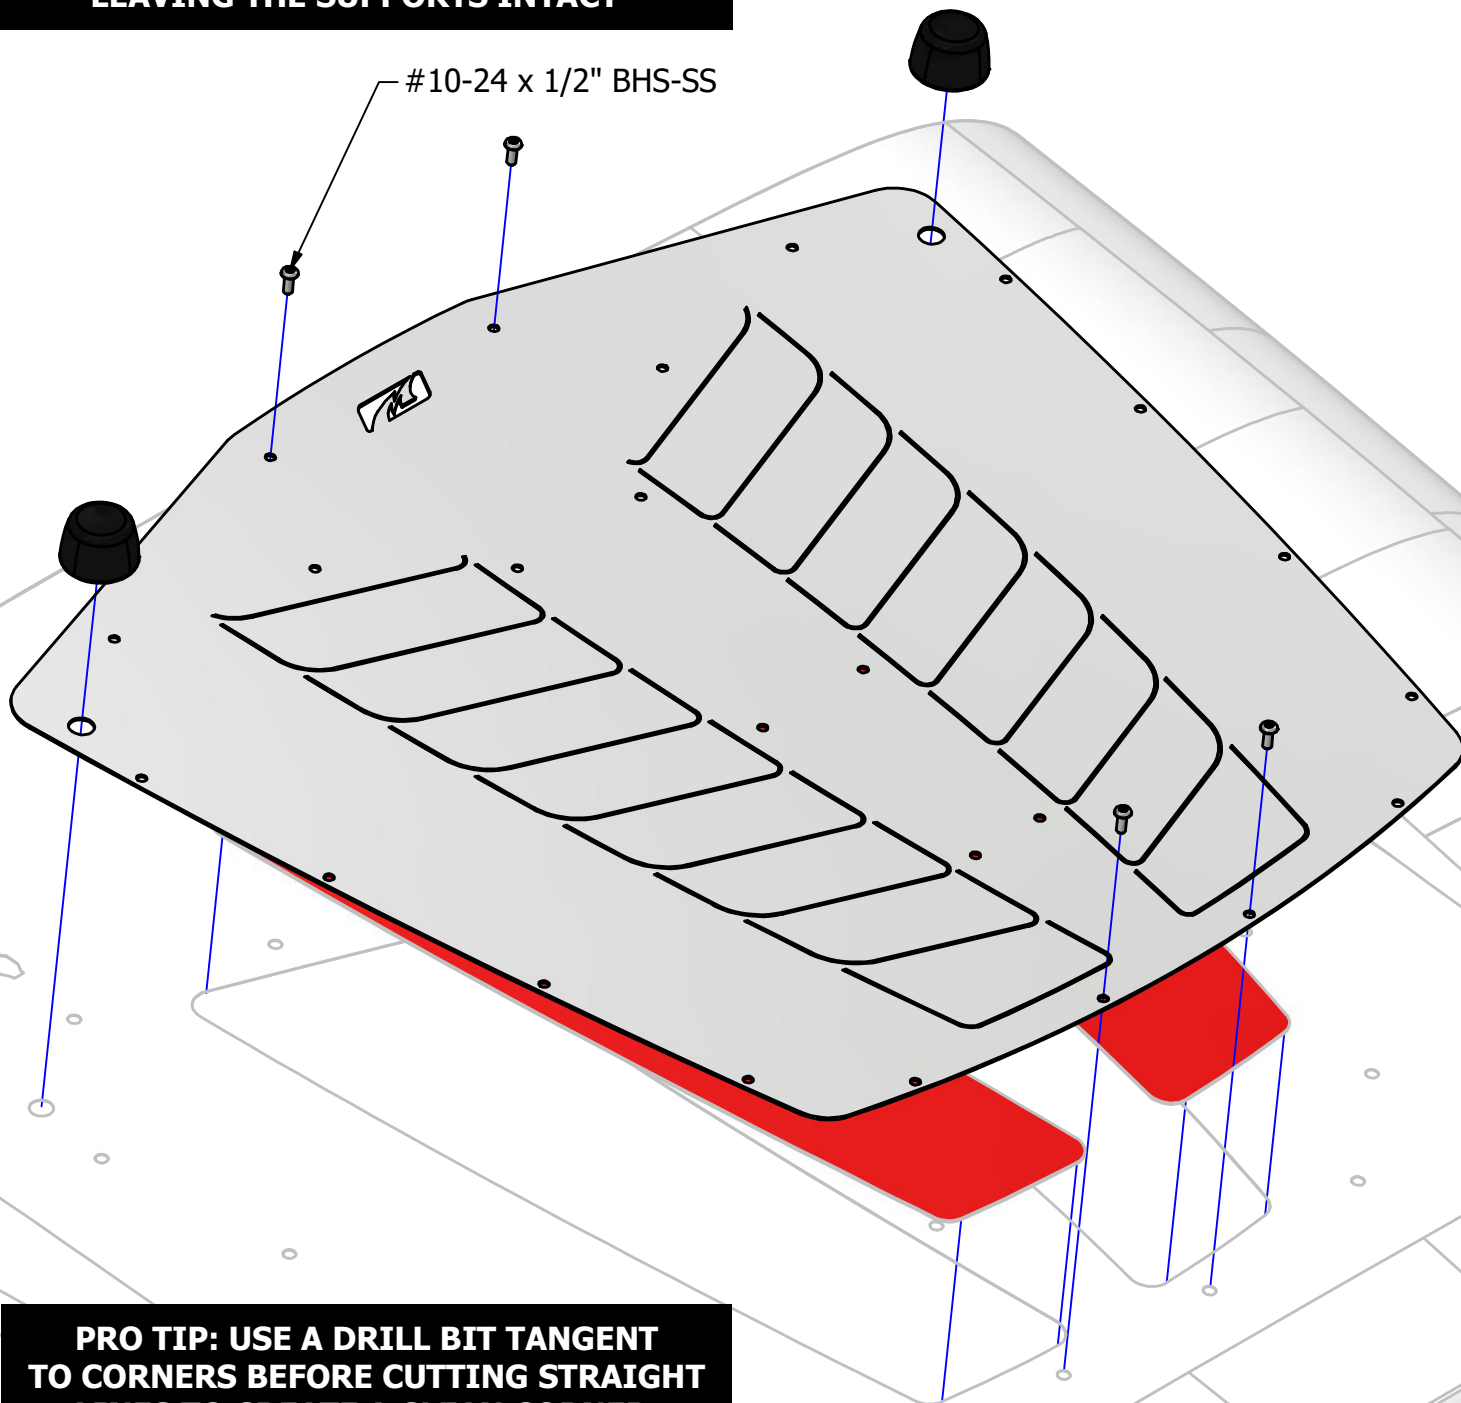


**PRO TIP: USE A DRILL BIT TANGENT  
TO CORNERS BEFORE CUTTING STRAIGHT  
LINES TO CREATE A CLEAN CORNER.**


# **MB5537 - Assembly Instructions**

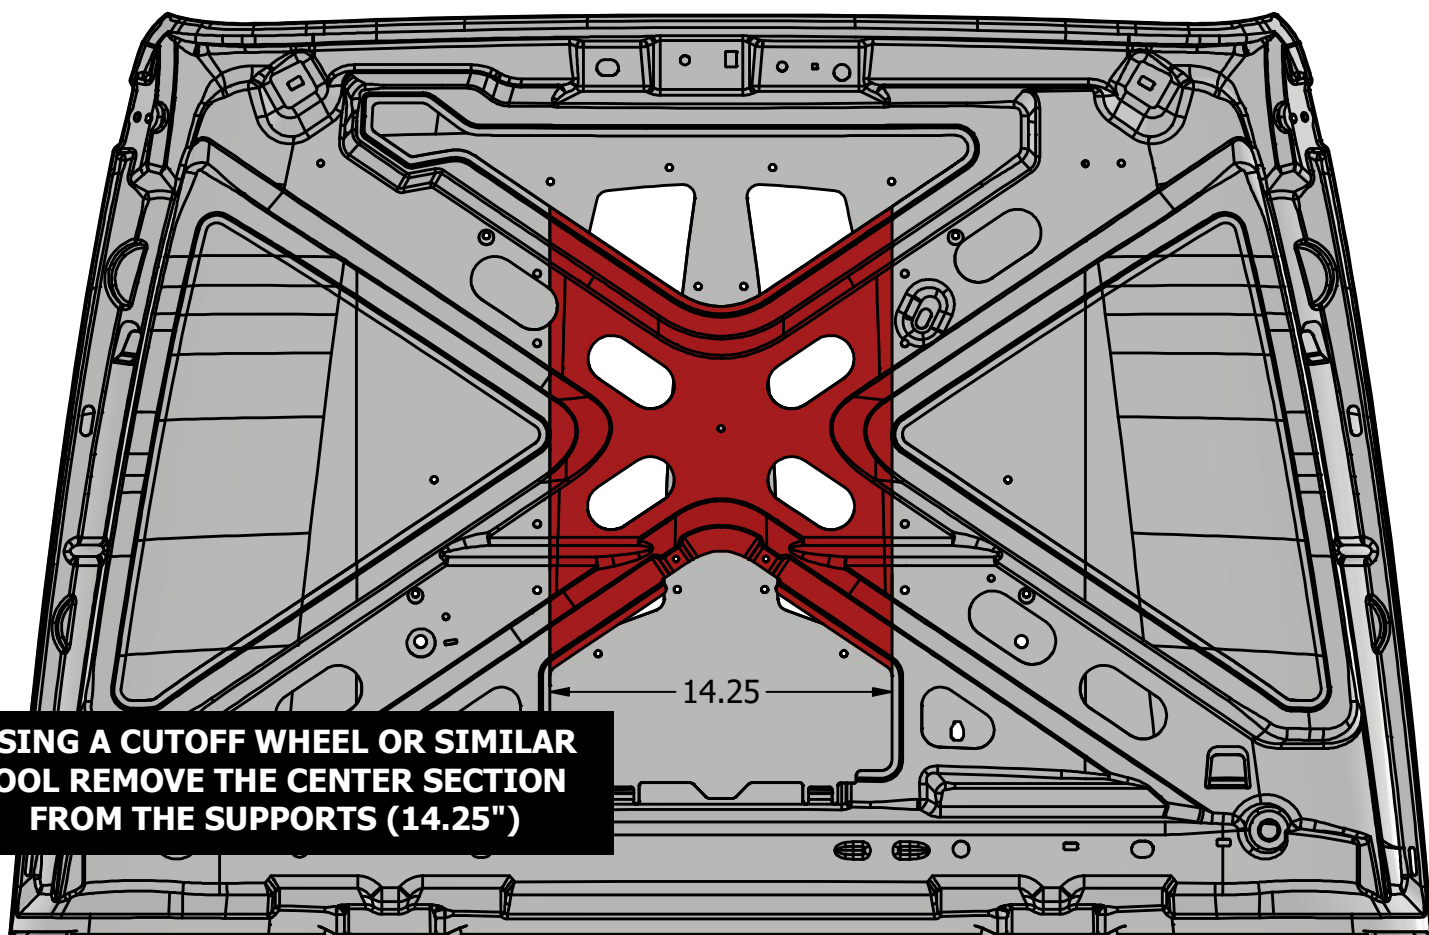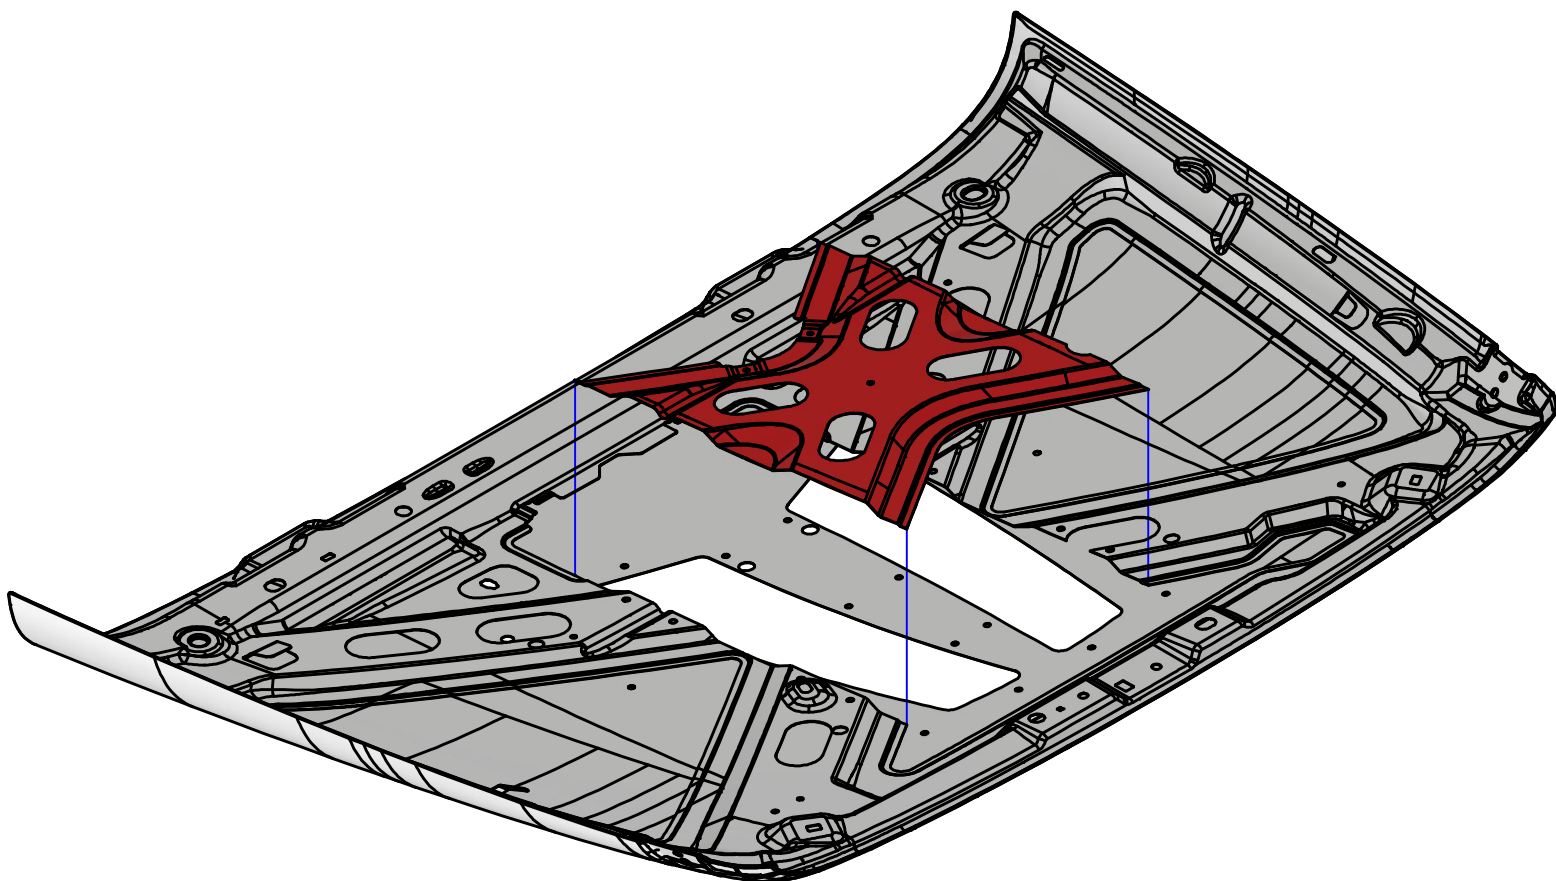


# MB5537 - Assembly Instructions

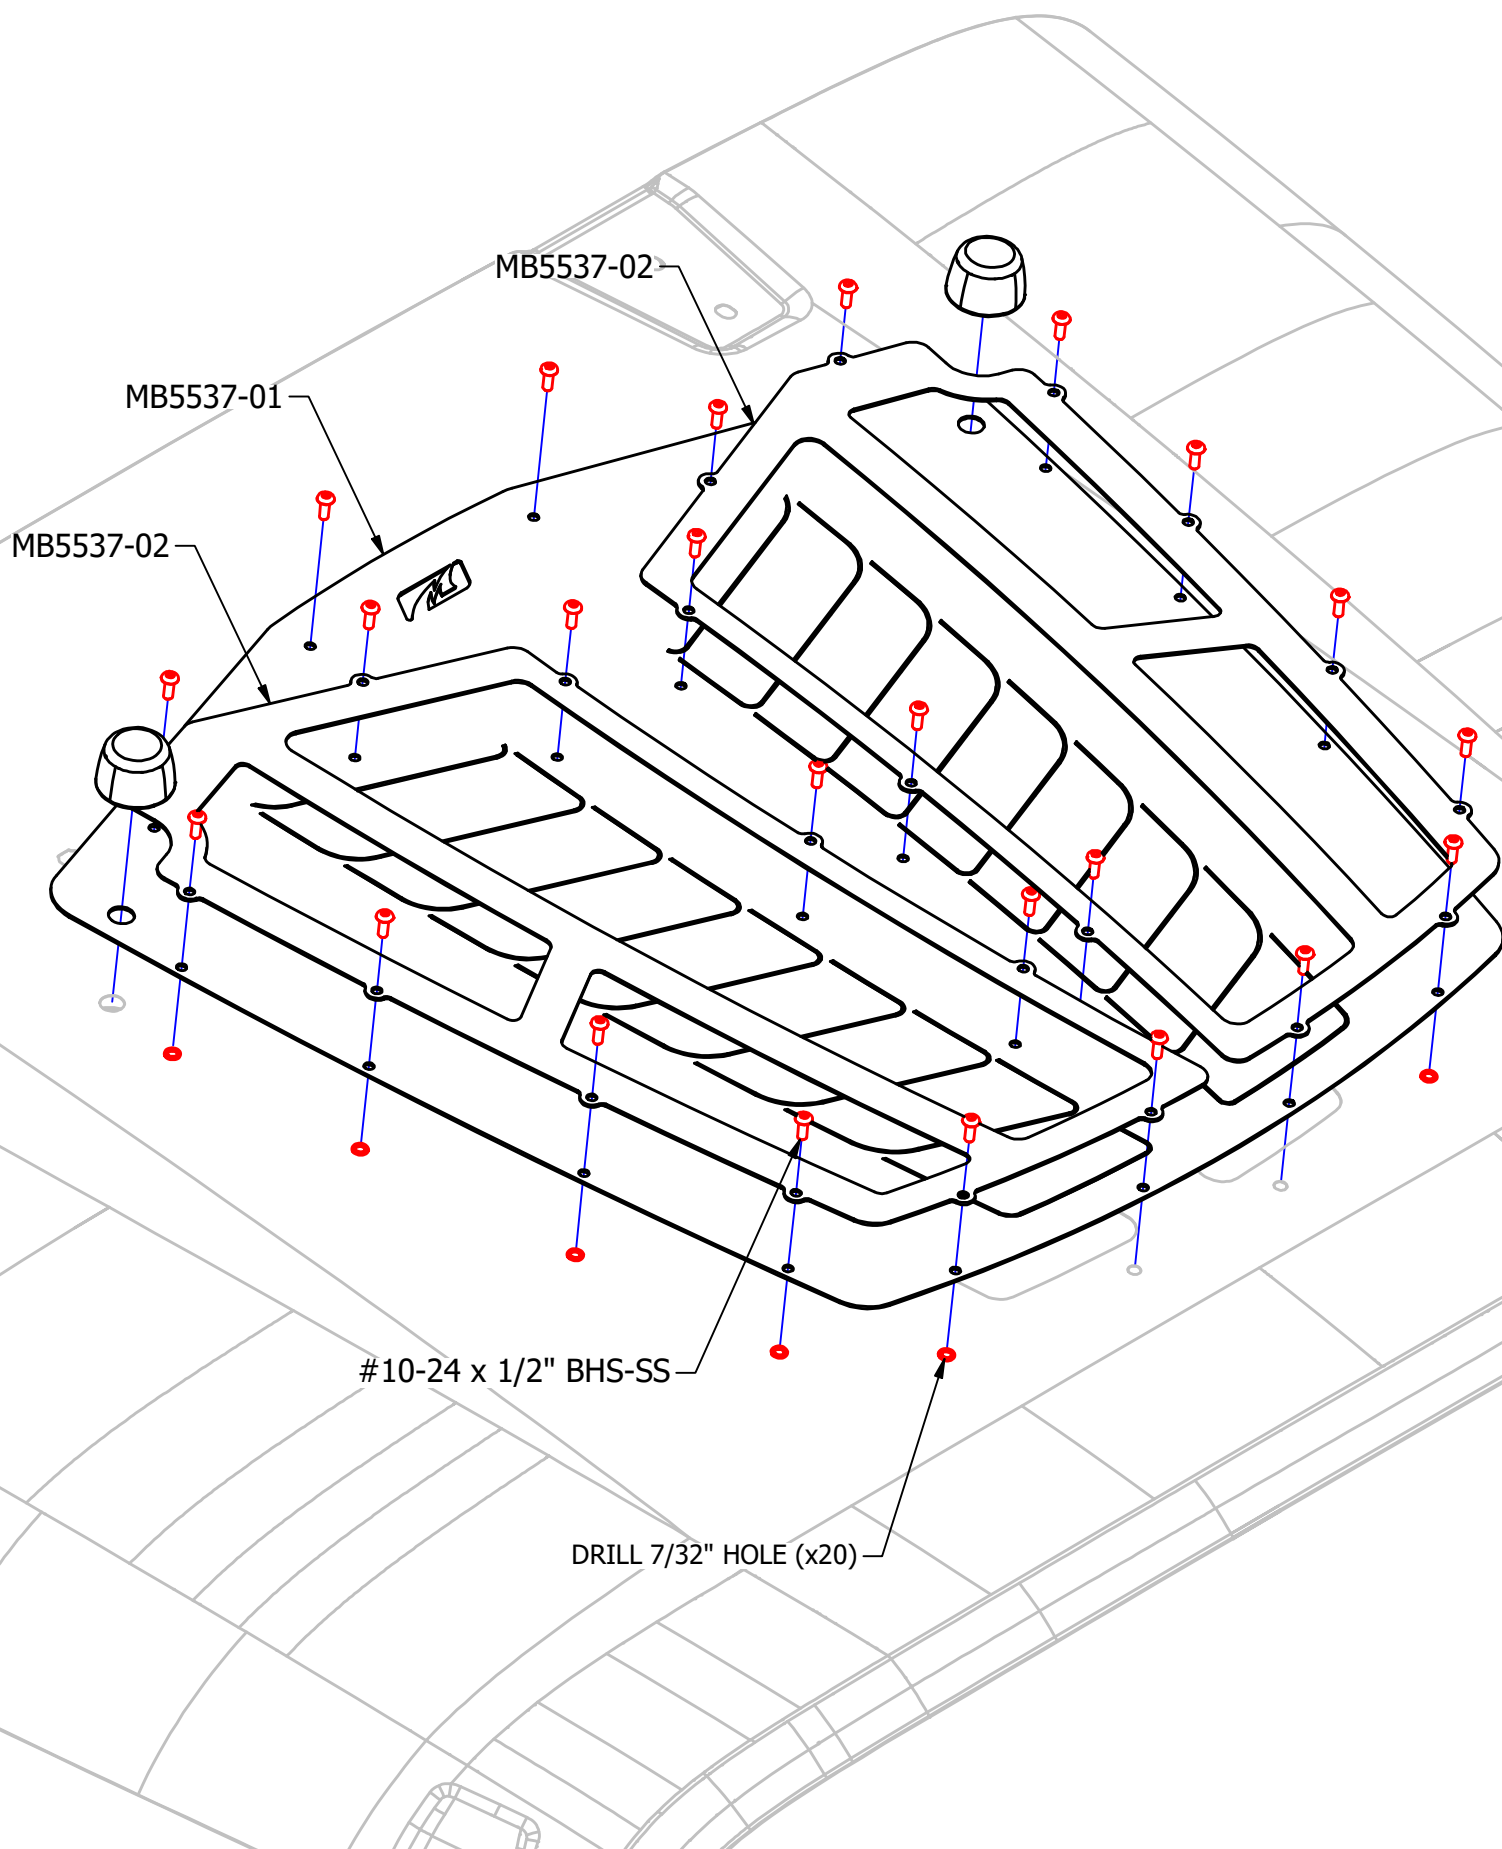

# MB5537 - Assembly Instructions

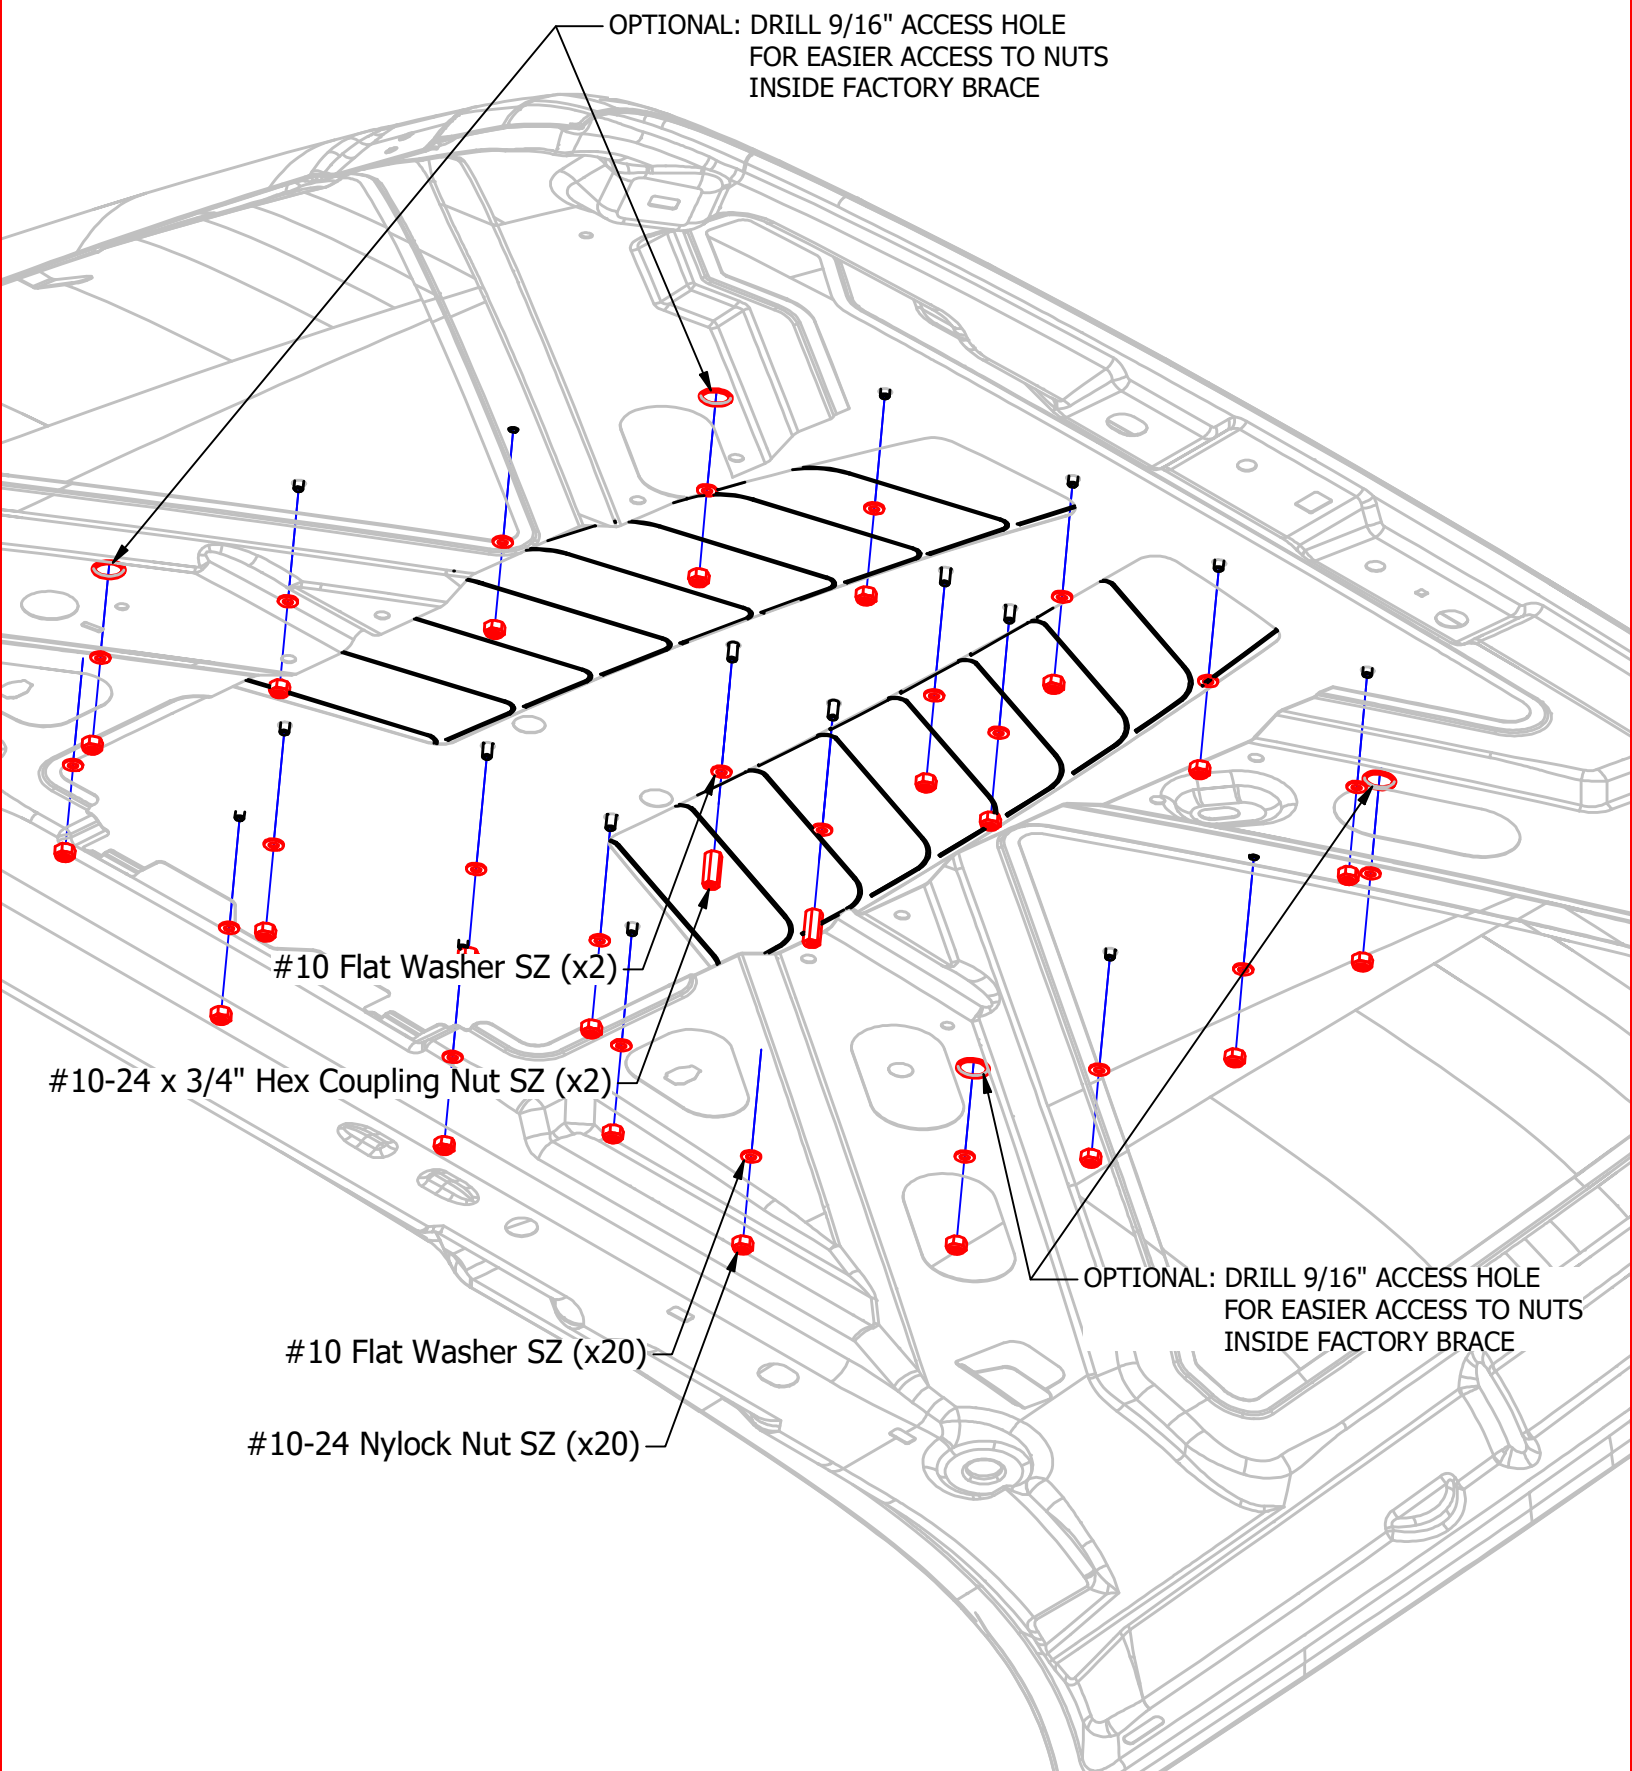


# MB5537 - Assembly Instructions

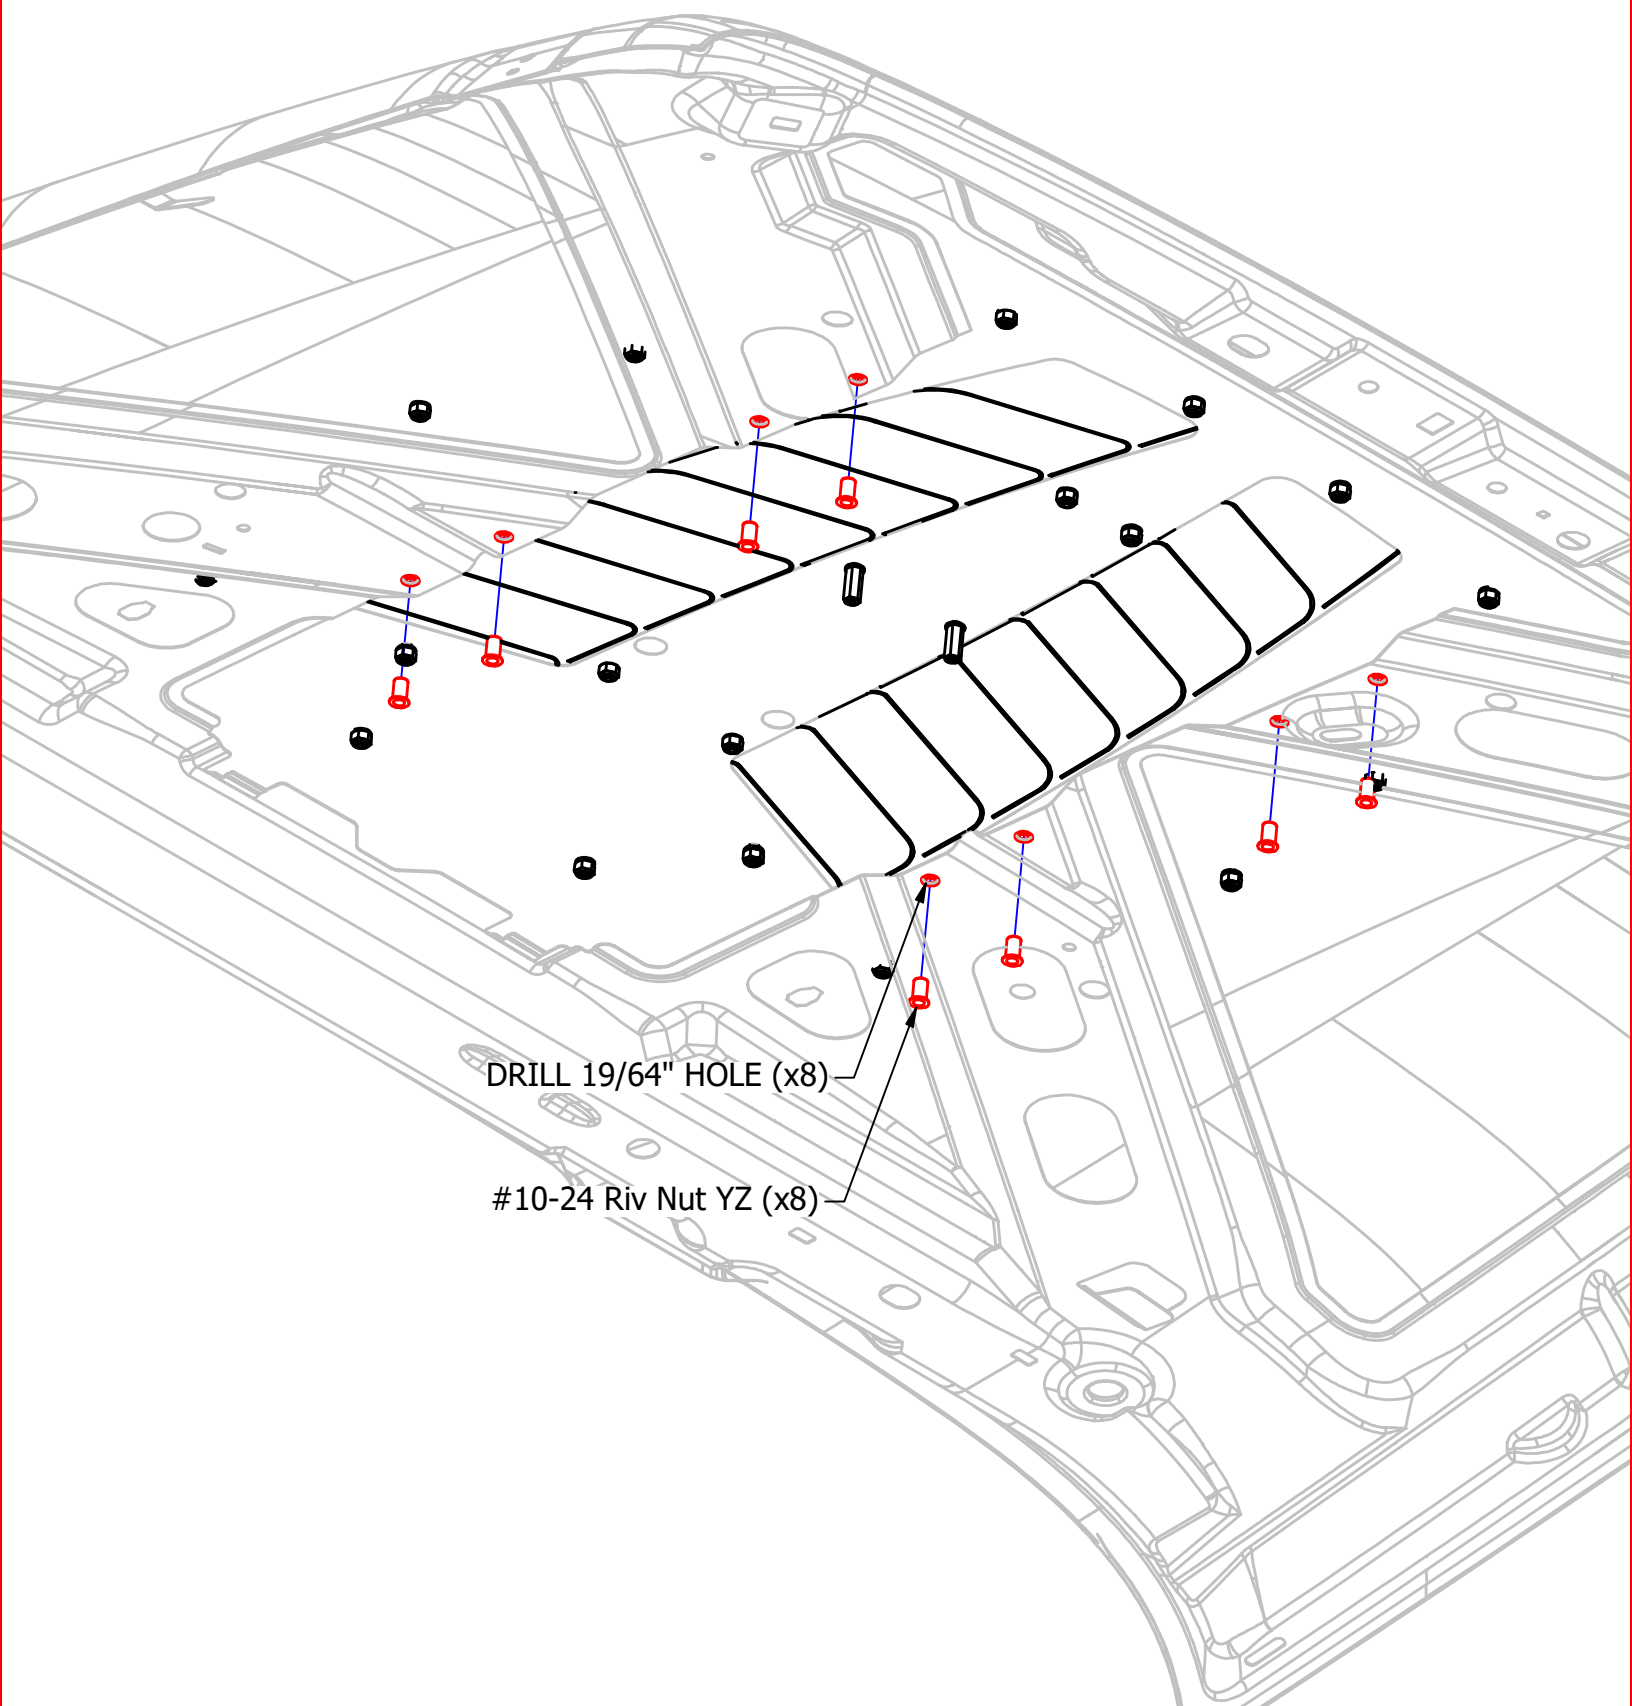

DRILL 19/64" HOLE (x8)

#10-24 Riv Nut YZ (x8)

# MB5537 - Assembly Instructions

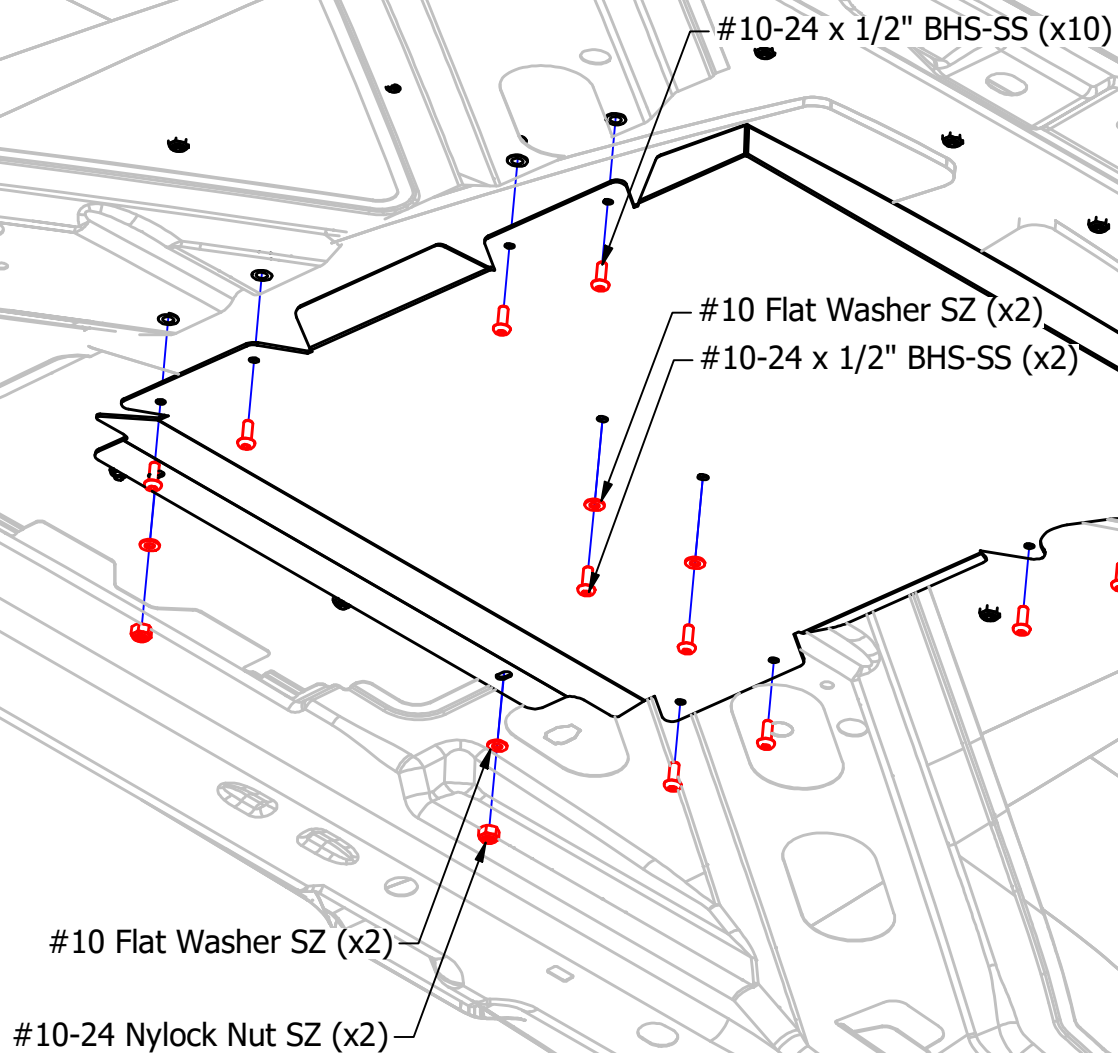

## MB5537 - Assembly Instructions

FOLD VENTS DOWN TO FORM  
LOUVRED SHAPE

